

SET 4

LOWER LINK KIT 33 REF. 099.24401

FOXY

2024



SAFETY AND GENERAL INSTRUCTIONS

Please, be aware that the following 3 icons may appear in this technical guide. Each one indicates to take the following precautions:



WARNING!

Not keeping to the indications or following unsafe practices may result in serious injuries or even death. The tasks involve technical difficulty and if they are badly developed, they could damage your bicycle or result in a void warranty.

(!)

CAUTION

Not keeping to the indications or following unsafe practices may result in light injuries. The tasks involve technical difficulty and if they are badly developed, they could damage your bicycle or result in a void warranty.

(i)

INFORMATION


Information which is essential for a proper execution of the task and therefore, avoid any possible damage to your bicycle or loosing the warranty, but does not involve any risk for the person.

CONSIDERATIONS

- Using non-original spare parts may result in damage, malfunctions and accidents which may lead to severe consequences.
- Please note that to perform some of the steps described in this manual, skills beyond the average bicycle user are required. In the event of not being qualified to follow any of these steps, please take your bicycle to a Mondraker authorized technical service for maintenance and replacement of its components. The incorrect installation of spare parts can result in malfunctions, accidents, injuries, and warranty void.


SET 4 LOWER LINK KIT 33

Foxy 2024

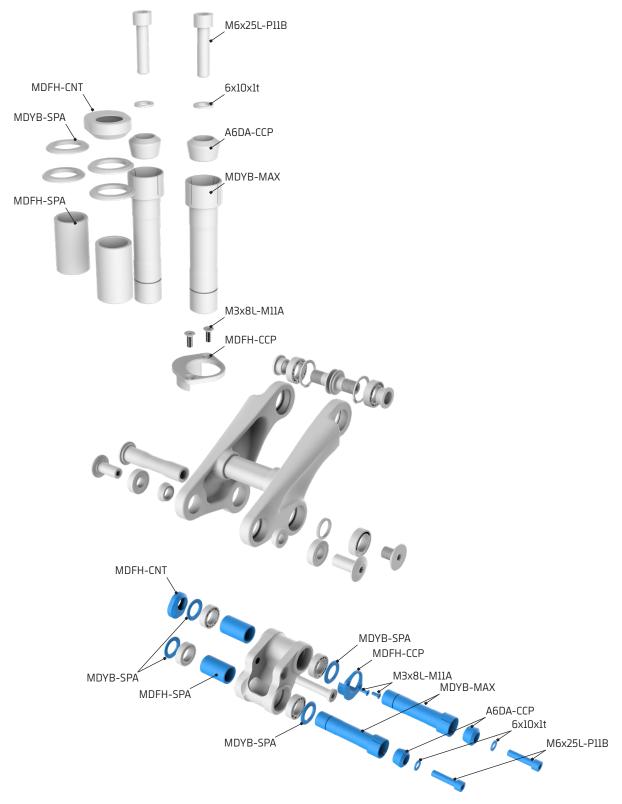



LUBRICATION & THREAD LOCKER

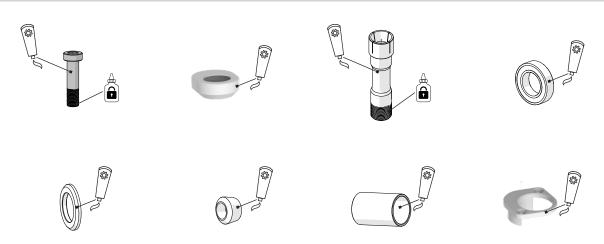

TOOLS



MEDIUM STRENGTH THREADLOCKER



SOFT-BRISTLED BRUSH



GLOVES



GREASE



NEUTRAL DEGREASER



HEX KEY SET



SAFETY GOGGLES

TOOLS AND TIGHTENING TORQUES



6 10 N.m



PHILIPS SCREWDRIVER



TORX CREW



ALLEN KEY




SPANNER

CLEANING

- Once the pieces are disassembled, it is recommended to clean, grease, and put thread locker (if necessary) on the components which are going to be re-used (except for the bearings).
- The bearings must **not be cleaned** and the original grease which they come with shall not be removed.

^{*} This symbol indicates tool type and size, as well as the tightening torque in Newtons per meter.

LOWER LINK INSTALLATION GUIDE

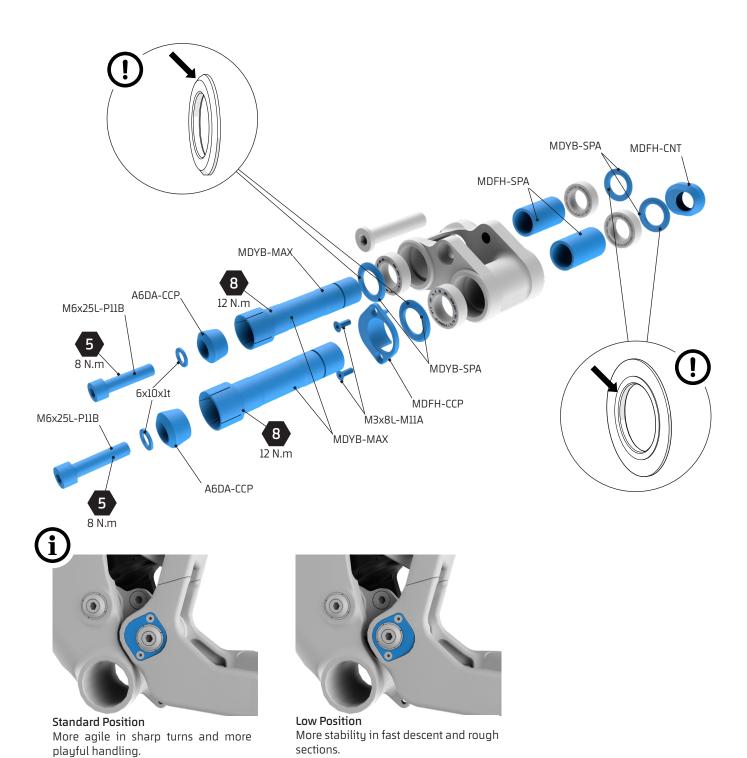

By changing the position of the rear axle on the lower link, from the "standard" geometry position to the "low position" the seat angle and head angle slackens 0,5°, bottom bracket height is lowered 5 mm, chainstay (and wheelbase) length increase 10 mm and reach is reduced by 5 mm as well.



All information and pictures on this document are provided for information purposes only and do not constitute a legal contract between Mondraker and any person or entity. Specifications, geometries or any other technical information published are subject to change without prior notice.

 \odot $^{\circ}$ All trademarks and models are property of Blue Factory Team, S.L.U. and are protected by current laws and applicable international agreements.